

2PK COPLEY UPHOLSTERED DINING CHAIR CARAMEL FAUX LEATHER

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Call 1-800-440-0680 to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The M6 bolts are labeled as (H1) x 8.

The M5 allen key is labeled as (H2) x 1.

The parts for assembly are identified alphanumerically for ease.

The two seats are labeled as A.

The two legs are labeled as B.

STEP 1:

Place the seat upside down on a flat surface and screw in the leg with four M6 bolts (H1) using the M5 allen key (H2).

STEP 2:

Repeat the same step for the second chair.

MAXIMUM WEIGHT LIMITS:

250lbs/113kgs

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.