

HAVERHILL 58" MEDIA STAND 4 DOORS

Congratulations on your latest Target purchase. Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

Do not use power tools for assembly. Use screwdriver and allen key.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The 40mm bolts are labeled as (H1) x 4.

The 30mm bolts are labeled as (H2) x 4.

The 20mm bolts are labeled as (H3) x 2.

The 1½" pan-head screws are labeled as (H4) x 4.

The ½" pan-head screws are labeled as (H5) x 32.

The cam lock bolts are labeled as (H6) x 12.

The cam locks are labeled as (H7) x 12.

The handle bolts are labeled as (H8) x 8.

The handles are labeled as (H9) x 4.

The hinges are labeled as (H10) x 8.

The ¾" pan-head screws are labeled as (H12) x 2.

The plastic restraints are labeled as (H13) x 2.

The allen key is added along with the parts.

The parts for assembly are identified alphanumerically for ease.

The top panel is labeled as A.

The 2 side assemblies are labeled as B.

The front assembly is labeled as C.

The divider is labeled as D.

The left base is labeled as E.

The right base is labeled as F.

The back assembly is labeled as G.

The 2 bottom rail are labeled as H.

The 2 door 1 are labeled as I.

The 2 door 2 are labeled as J.

HOW TO USE CAM LOCK SYSTEM

The cam lock bolt is inserted and screwed into the respective hole on the panel. The cam lock is inserted and secured in the hole present on the panel to be attached, with the arrow feature on cam lock top pointing to the end of frame. The cam locks are rotated clockwise 180° to lock parts together. The panel should be tight against each other and connection should be rigid.

STEP 1:

Insert cam lock bolts into pre-drilled holes in top panel, front and back assemblies, then tighten. Screw-in cam lock bolts must be screwed down flush.

STEP 2:

Insert cam locks into holes in front assembly, divider and back assembly. Make sure the arrow of cam locks are pointing towards the end of the panel.

STEP 3:

Attach front and back assemblies to divider using cam locks.

STEP 4:

Slide left and right bases into the groove.

STEP 5:

Attach bottom rail to middle leg using 20mm bolts. Tighten bolts using allen key.

STEP 6:

Attach side assemblies to unit using 40 and 30mm bolts and 1½" pan-head screws. Tighten bolts using allen key.

STEP 7:

Attach top panel to unit using cam locks.

STEP 8:

Attach plastic restraint to back of unit using ¾" pan-head screws. Attach plastic restraint that has already attached to unit to wall screw and anchor (not provided). Adjust the adjuster that has attached to the legs to stabilize your media stand.

STEP 9:

Attach hinges to doors using ½" pan-head screws.

STEP 10:

Attach handles to doors using handle bolts. Attach doors to unit using ½" pan-head screws.

STEP 11:

Front middle screw on hinge will adjust your door to the left and right. Back middle screw on hinge will adjust your door forward and backward. Screw on hinge base will adjust your door up and down.

Your assembly is complete. Your unit is now ready for use. The red TARGET logo appears and fades from the screen.