

## 2PK ASTRID MID CENTURY DINING CHAIR WOOD SEAT

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-855-MYTGTHOME (855-698-4846).

Use the carton as working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

*DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The required hardware parts are:

The JCB M6 x 30 bolts are labeled as (H1) x 2.

The JCB M6 x 70 bolts are labeled as (H2) x 7.

The wood plugs are labeled as (H3) x 2.

The M5 allen key is labeled as (H4) x 1.

The parts for assembly are identified alphanumerically for ease.

The right back leg is labeled as A

The left back leg is labeled as B

The seat panel is labeled as C

The back panel is labeled as D

### STEP 1:

Turn the chair upside down.

Attach leg (A) to slot in leg (B)

Align holes in legs (A&B) to the holes in seat panel (C).

Insert and tighten the bolts.

### NOTE

For more convenience, put the item up-side down and assemble on the table.

### STEP 2:

Tighten all bolts using the Allen key once all bolts are aligned with holes.

Turn the chair upright.

Attach the back panel (D) to assembled back legs.

Align the holes in back panel (D) to the holes in leg (A&B).

Insert and tighten bolts, then cover the holes with wood plug.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.