

WOVEN ARCHED WOOD CABINET

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

Before you begin:

Check for damaged or missing parts. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

- The long bolts are labeled as H1 x 10.
- The short bolts are labeled as H2 x 4.
- The sleeve nuts are labeled as H3 x 4.
- The 1/2" pan-head screws are labeled as H4 x 20.
- The 5/8" flat-head screws are labeled as H5 x 16.
- The cam lock bolts are labeled as H6 x 12.
- The cam locks are labeled as H7 x 12.
- The handle bolts are labeled as H8 x 2.
- The handles are labeled as H9 x 2.
- The hinges are labeled as H10 x 4.
- The dowels are labeled as H11 x 4.
- The wedges are labeled as H12 x 16.
- The shelf pins are labeled as H13 x 4.
- The plastic strip is labeled as H14 x 1.
- The magnets are labeled as H15 x 2.
- The Allen keys are labeled as H16 x 2.
- The 3/4" pan-head screws are labeled as H17 x 2.
- The plastic restraints are labeled as H18 x 2.

The parts for assembly are identified alphanumerically for ease.

- The front top arc is labeled as A.
- The back top arc is labeled as B.
- The three arc panels are labeled as C.
- The top assembly is labeled as D.
- The left assembly is labeled as E.
- The right assembly is labeled as F.
- The left door is labeled as G.
- The right door is labeled as H.
- The fixed shelf is labeled as I.

The adjustable shelf is labeled as J.
The base assembly is labeled as K.
The arc back panel is labeled as L.
The two back panels are labeled as M.

HOW TO USE CAM LOCK SYSTEM

The cam bolt is inserted and secured in the respective hole on the panel.
The cam lock is inserted and secured in the hole present on the panel to be attached.
The panels are brought close to each other at right angles such that the cam bolt can be inserted into the cam lock of the respective panels.
With the help of a screwdriver, the cam lock is turned 180 degrees clockwise and tightened till the structure is perfectly secured.
Make sure the cam bolts have been screwed down flush and not left partially inserted.

STEP 1:

Insert the cam lock bolts (H6) into the pre-drilled holes in the left and right assemblies (E, F), then tighten.
Screw-in cam lock bolts must be screwed down flush.

STEP 2:

Insert the cam locks (H7) into the holes in the top assembly (D), fixed shelf (I) and base assembly (K).
Make sure the arrows of the cam locks are pointing towards the end of the panel.

STEP 3:

Attach the magnets (H15) to the top assembly (D) using 1/2" pan-head screws (H4).

STEP 4:

Attach the top assembly (D), fixed shelf (I) and base assembly (K) to the left assembly (E) using the cam lock system (H6, H7).

STEP 5:

Join the two back panels (M) using the plastic strip (H14).
Slide the back panels (M) into the groove.

STEP 6:

Attach the right assembly (F) to the unit using the cam lock system (H6, H7).

STEP 7:

Assemble the arc panels (C) using short bolts (H2) and sleeve nuts (H3).
Tighten the bolts (H2) and nuts (H3) using the Allen keys (H16).

STEP 8:

Attach the front and back top arcs (A, B) to the arc panel assembly using long bolts (H1) and dowels (H11).
Tighten the bolts (H1) using Allen key (H16).

STEP 9:

Slide the arc back panel (L) into the grooves of the unit and the arc unit.

Secure the arc unit to the unit using long bolts (H1).

Tighten the bolts (H1) using the Allen key (H16).

STEP 10:

Attach the wedges (H12) to the unit using 5/8" flat-head screws (H5).

Use the adjustable leveler at the legs to stabilize the unit.

STEP 11:

Attach the hinges (H10) to the doors (G, H) using 1/2" pan-head screws (H4).

STEP 12:

Attach the handles (H9) to the doors (G, H) using handle bolts (H8).

Attach the hinges (H10) already attached to the doors (G, H) to the unit using 1/2" pan-head screws (H4).

STEP 13:

Use the screw at the back of the hinges (H10) to adjust the doors (G, H) forward or backward.

Use the front middle screw on the hinges (H10) to adjust the doors (G, H) to the left or right.

Use the screw on the hinges (H10) base to adjust the doors (G, H) up or down.

STEP 14:

Insert the shelf pins (H13) into the left and right assemblies (E, F) at the desired level.

Place the adjustable shelf (J) onto the shelf pins (H13).

STEP 15:

Attach the plastic restraints (H18) to the back of the unit using 3/4" pan-head screws (H17).

Attach the plastic restraints (H18) that have already been attached to the unit to the wall using wall screws and anchor (not provided).

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.