

MINSMERE CANED CHEST 2 DOORS

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your patio in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

Do not use power tools for assembly. Use screwdriver and allen key.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The bolts are labeled as (H1) x 4.

The ½" pan-head screws are labeled as (H2) x 30.

The cam lock bolts are labeled as (H3) x 18.

The cam locks are labeled as (H4) x 18.

The handle bolts are labeled as (H5) x 4.

The handles are labeled as (H6) x 2.

The wooden dowels are labeled as (H7) x 8.

The shelf pins are labeled as (H8) x 4.

The hinges are labeled as (H9) x 4.

The washers are labeled as (H10) x 4.

The allen key is labeled as (H11) x 1.

The ¾" pan-head screws are labeled as (H12) x 2.

The plastic restraint is labeled as (H13) x 2.

The parts for assembly are identified alphanumerically for ease.

The top panel is labeled as A.

The left assembly is labeled as B.

The right assembly is labeled as B1.

The two doors are labeled as C.

The shelf panel is labeled as D.

The shelf assembly is labeled as D1.

The bottom assembly is labeled as E.

The back panel is labeled as F.

HOW TO USE CAM LOCK SYSTEM

The cam lock bolt is inserted and screwed into the respective hole on the panel. The cam lock is inserted and secured in the hole present on the panel to be attached, with the arrow feature on cam lock top pointing to the end of frame. The cam locks are rotated clockwise 180° to lock parts together. The panel should be tight against each other and connection should be rigid.

STEP 1:

Screw cam lock bolt into panel. Cam lock bolts must be screwed down flush.

STEP 2:

Push cam lock into panel. Arrow feature on cam lock top points to panel edge.

STEP 3:

Detach the hinges from the base.

Attach hinge bases to divider, left and right assemblies using 1/2" pan-head screw.

Attach hinges to doors using 1/2" pan-head screw.

STEP 4:

Attach top panel and shelf assembly to left and right assemblies. Place bottom assembly between left and right assemblies.

STEP 5:

Attach bottom assembly to left and right assemblies using bolts and washers. Tighten bolts using allen key.

STEP 6:

Attach back panel to unit using 1/2" pan-head screw.

STEP 7:

Attach handle to door using handle bolts. Do the same step to the next door.

STEP 8:

Insert shelf support pin to left side of unit at desired level.

Place left side of shelf panel on shelf support pin.

Lift the right side of shelf panel and insert shelf support pin to right side of unit at desired level.

STEP 9:

Attach doors to unit by sliding the hinge to base and tighten screw at diagram.

STEP 10:

Front middle screw on hinge will adjust your door to the left and right.

Back middle screw on hinge will adjust your door forward and backward.

Screw on hinge base will adjust your door up and down.

STEP 11:

Attach plastic restraint to back of unit using 3/4" pan-head screws.

Attach plastic restraint that has already attached to unit to wall using wall screw and anchor (not provided).

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.