

ROOM ESSENTIALS NIGHT STAND

Congratulations on your latest Target purchase.

Now what? Don't start sweating over the box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck – though we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Visit www.sauder.com/services to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

PARTS LIST

The parts for assembly are identified alphanumerically for ease.

The right end is labeled as A.

The left end is labeled as B.

The top is labeled as C.

The shelf is labeled as D.

The drawer back is labeled as D81.

The right drawer back is labeled as D245.

The left drawer back is labeled as D271.

The drawer bottom is labeled as D959.

The drawer front is labeled as E.

The bottom is labeled as F.

The back is labeled as G.

HARDWARE

The required hardware parts are:

The universal cabinet rails are labeled as (30DA) x 2.

The drawer right is labeled as (30DC) x 1.

The drawer left is labeled as (30DD) x 1.

The hidden cams are labeled as (1F) x 8.

The cam dowels are labeled as (2F) x 8.

The drawer front bracket is labeled as (8G) x 1.

The nails are labeled as (1N) x 22.

The black 9/16" large head screws are labeled as (1S) x 4.

The gold 5/16" flat head screws are labeled as (3S) x 8.

The black 1-9/16" flat head screws are labeled as (30S) x 4.

The black 1-15/16" flat head screws are labeled as (113S) x 4.

Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Pay close attention to the color of each screw. You may receive extra hardware with your unit.

STEP 1:

Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.

Push eight hidden cams (1F) into the ends (A and B) and shelf (D). Then, insert the metal end of a cam dowel (2F) into each hidden cam.

Do not tighten the hidden cams in this step.

STEP 2:

Fasten the universal cabinet rails (30DA) to the ends (A and B). Use four gold 5/16" flat head screws (3S) through holes #1 and #3.

STEP 3:

Fasten the shelf (D) to the left end (B). Tighten two hidden cams.

CAUTION

Risk of damage or injury.

Hidden Cams must be completely tightened.

Hidden Cams that are not completely tightened may loosen, and parts may separate.

CAUTION

Do not stand the unit upright without the back fastened.

The unit may collapse.

STEP 4:

Fasten the right end (A) to the shelf (D). Tighten two hidden cams.

STEP 5:

Fasten the right end (A) to the shelf (D). Tighten two hidden cams.

STEP 6:

Fasten the bottom (F) to the ends (A and B). Use four black 1-15/16" flat head screws (113S).

NOTE: Start each screw a few turns before completely tightening any of them.

STEP 7:

Carefully turn your unit over onto its front edges. Unfold the back (G) and lay it over your unit.

Make equal margins along the two long edges of the back (G) and make the bottom edge even with the bottom (F). Push on opposite corners of your unit if needed to make it "square".

Fasten the back (G) to your unit using the nails (1N)

NOTE: A perforation has been provided for access through the back. Carefully cut out the hole if needed.

CAUTION

Do not stand the unit upright without the back fastened. The unit may collapse.

STEP 8:

Pull the drawer front brackets (8G) apart and slide them into the grooves in the drawer sides (D245 and D271). You may need to gently tap them in with a hammer.

NOTE: The drawer front brackets are marked "RH" and "LH" for easy identification.
Fasten the drawer front (E) to the drawer front brackets (8G).
Use four black 9/16" large head screws (1S).

Slide the drawer bottom (D959) into the grooves in the drawer sides (D245 and D271) and drawer front (E).

Be sure the drawer bottom inserts into the drawer front groove.
Fasten the drawer back (D81) to the drawer sides (D245 and D271).
Use four black 1-9/16" flat head screws (30S).
Be sure the drawer bottom inserts into the drawer back groove.

STEP 9:

Fasten a drawer right (30DC) to the right drawer side (D245) and a drawer left (30DD) to the left drawer side (D271).
Use four gold 5/16" flat head screws (3S) through holes #1 and #2.

NOTE: Use the exact holes shown in the drawer sides.

NOTE: The glides are not intended to rotate.

STEP 10:

Carefully stand your unit upright.
To insert the drawer into your unit, tip the front of the drawer down and drop the glides on the drawer behind the glides on the unit.
Lift the front of the drawer up and slide it into the unit.

HOW TO ADJUST THE DRAWER

STEP 1:

Open the drawer. Loosen these screws. Adjust the drawer front up or down as needed. Tighten the screws.
If further adjustments are needed, go to STEP 2.

STEP 2:

Loosen the screw in the slotted hole. Adjust the drawer up or down as needed. Tighten the screw.
Adjust the drawer up or down.

The gap should be constant across the top with no rubbing.

WEIGHT LIMITS

Top: 25 lbs.

Shelf: 15 lbs.

Drawer: 15 lbs.

NOTE: Please read the back pages of the instruction booklet for important safety information.

This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

1-YEAR LIMITED WARRANTY

1. Sauder Woodworking Co. (Sauder®) provides limited warranty coverage to the original purchaser of this product for a period of one year from the date of purchase against defects in materials or workmanship of Sauder furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

2. There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care. There is also no warranty coverage for rented products or any products purchased "used" or "as is", at a distress or going-out-of business sale, or from a liquidator.

3. As the exclusive remedy under this Warranty, Sauder will (at its sole option) repair, replace or refund the value of any defective furniture component. Sauder may require independent confirmation of the claimed defect and proof of purchase. Replacement parts will be warranted for only the remaining period of the original Warranty. Sauder shall have no liability for any incidental or consequential damages of any kind and all such damages are excluded from this warranty, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

4. This Warranty applies only to warranted defects that first arise and are reported to Sauder within the warranty coverage period. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

5. There are no other warranties applicable to this product. Under the laws of certain states, there may be no implied warranties from Sauder and all implied warranties, including any implied warranty of merchantability or fitness for a particular purpose are disclaimed where allowed by law. To the extent any implied warranties are applicable, any implied warranties, including any implied warranty of merchantability or fitness for a particular purpose, are limited in duration to the duration of this express warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you.

6. For Warranty inquiries or claims, please visit our website www.sauder.com. You can also contact Sauder at 1.800.523.3987. Sauder may require Warranty claims to be submitted in writing to: Sauder Woodworking Co., 502 Middle Street, Archbold, OH 43502 USA. Please include your sales receipt or other proof of purchase and a specific description of the product defect.

WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following:

Overloaded drawers or shelves can result in risk of injury. It can tip over top-heavy furniture.

Overloaded drawers or shelves can break.

To avoid the problem, never exceed the weight limits shown in the instructions.

Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.

Placing TVs on furniture items that are not designed to support a television is hazardous. It may result in risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward. This product is not designed to support a television.

Your assembly is complete. Your night stand is now ready for use. The red TARGET logo appears and fades from the screen.