

HAVERHILL WOOD ROUND COFFEE TABLE

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-800-MYTGTHOME (1-855-698-4846) to order missing supplies.

Use the carton as working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The head cap bolts are labeled as (H1) x 12.

The spring washers are labeled as (H2) x 12.

The flat washers are labeled as (H3) x 12.

The allen key is labeled as (H4) x 1.

The 1 1/2" pan-head screws are labeled as (H5) x 8.

The wooden screws are labeled as (H6) x 8.

The parts for assembly are identified alphanumerically for ease.

The top assembly is labeled as A.

The four legs are labeled as B.

The shelf assembly is labeled as C.

The four stretchers are labeled as D.

STEP 1:

Attach two legs (B) to the shelf assembly (C) using one head cap bolt (H1), one spring washer (H2) and one flat washer (H3) each using the allen key (H4).

NOTE:

Do not over tighten the bolts.

STEP 2:

Attach the unit from STEP 1 to the top assembly (A) using two head cap bolts (H1), two spring washers (H2) and two flat washers (H3) on each side.

NOTE:

Tighten bolts using the allen key (H4).

STEP 3:

Attach the two stretchers (D) to the two legs (B) using one 1 1/2" pan-head screw (H5) and wooden dowels (H6) for each stretcher.

STEP 4:

Attach one unit from STEP 3 to the top assembly unit using three head cap bolts (H1), three spring washers (H2) and three flat washers (H3) each. Attach one 1 1/2" pan-head screw (H5) and one wooden dowel (H6) two each leg of the top assembly unit.

STEP 5:

Attach the second unit from STEP 3 to the top assembly unit using three head cap bolts (H1), three spring washers (H2) and three flat washers (H3) each. Attach one 1 1/2" pan-head screw (H5) and one wooden dowel (H6) for each leg of the top assembly unit.

STEP 6:

Adjust the adjuster that has been attached to the legs to stabilize your console table.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.