

ROOM ESSENTIALS MEDIA STAND TV 60"

Congratulations on your latest Target purchase. Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Call 1-800-440-0680 to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

A hammer, a flat head screwdriver and a drill are needed for assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

WARNING

This product is intended for floor use only and not for wall mount use.

Serious or fatal crushing injuries can occur from furniture tip-over.

To help prevent tip over:

- Anchor unit to stud or wall.
- Place heaviest items on the lowest surfaces as far back from the front edge as possible. Do not set TVs or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Do not allow children to climb or hang on unit.
- Use of tip-over restraints may only reduce, but not eliminate the risk of the tip over.
- This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.
- Do not mount or attach anything to the sides, rear or front of the unit as this can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.
- Do not stack units. Stacking of units can cause an unsafe tip-over hazard which may cause serious bodily injury and/or damage to personal belongings.
- All units must be secured individually to wall.
- DO NOT use this item if any parts are missing, damaged or worn.
- DO NOT use this item unless all fixings are secured.
- Always use on a level, even surface.

This product is TSCA Title VI Compliant

This product is California 93120 Compliant For Formaldehyde Phase II

WARNING: This product can expose you to chemicals including Formaldehyde, which is known to the State of California to cause cancer or birth defects or other reproductive harm.

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

To help prevent tip-over:

- Install tip-over restraint provided.
- Place heaviest items on the lowest surfaces as far back from the front edge as possible.
- Do not set TVs or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.

Use of tip-over restraints may only reduce, but not eliminate, the risk of the tip-over.

This is a permanent label.

Do not attempt to remove!

WEIGHT CAPACITY / CARE INSTRUCTIONS

WARNING: This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

WARNING: Please ensure that all the objects are removed before moving the assembled unit. The unit must be lifted by more than one person, not dragged or pushed. Failure to do so will cause product damage, instability, product collapse, and/or serious injury.

Cleaning Instructions:

- Gently wipe the cabinet with a soft cloth.
- To clean the cabinet, dampen the cloth with a neutral detergent and water, wipe the cabinet and follow with a dry cloth.
- DO NOT clean with benzene thinner, alkaline detergent, alcoholic system detergent, glass cleaner, wax, polish cleaner, soap powder, or insecticide.
- Rubber or vinyl should not be in contact with the cabinet for an extended period of time. These types of fluids and materials can cause the finish to deteriorate, crack or peel.
- No lubrication required.

The required hardware parts are:

The wood dowels are labeled as (H1) x 16.

The shelf pins are labeled as (H2) x 12.

The nails are labeled as (H3) x 24.

The nail holders are labeled as (H4) x 1

The support feet are labeled as (H5) x 2.

The cams are labeled as (H6) x 16.

The assembly dowels are labeled as (H7) x 16.

The screw cover stickers are labeled as (H8) x 3.

The anti-tip hardware parts are:

The L Brackets are labeled as (H9) x 3

The washers are labeled as (H10) x 6.

The wall anchors are labeled as (H11) x 3.

The 2 3/8" TC screws are labeled as (H12) x 3.

The 3/8" flat-head screws are labeled as (H13) x 3.

The parts for assembly are identified alphanumerically for ease.

The side panel LH is labeled as A.

The side panel RH is labeled as B.

The top panel is labeled as C.

The back panel is labeled as D.

The 3 shelves are labeled as E.

The 2 divider panels are labeled as F.

The bottom panel is labeled as G.

HELPFUL HINTS

We recommend you protect your work surface during assembly to prevent scratching or damage to table tops, wood floors, etc.

Unfinished edges are shaded in gray. It is important to understand how finished edges go together. Take a moment to lay out all the wood pieces and note the finished and unfinished (raw wood) edges. Arrange pieces so all finished edges are facing the same way. While assembling, take care to note in each diagram which way finished edges are facing. In general, all finished edges will face forward and all finished sides (large area of piece) will face up when product is fully assembled and upright.

HAND TIGHTEN SCREWS

We recommend you hand-tighten screws. Use care not to overtighten if using power tools.

HOW TO USE THE CAM LOCK SYSTEM

Screw cam bolt into panel. Push cam into panel - arrow feature on cam top points to panel edge. Align cam bolts with cams and insert all the way into cross-bored holes. Rotate cams clockwise 190°-230° to lock panels together. Panels should be tight against each other and connection should be rigid.

STEP 1:

Attach wooden dowels to panels.

Carefully tap 16x wooden dowel (H1) into place.

STEP 2:

Attach cams to panels. Carefully tap 16x cam (H6) into place.

STEP 3:

Attach metal dowels to panel.

Attach 4x metal dowels (H7) into the pre-drilled holes on panels, screw-in cam bolts must be screwed down flush.

STEP 4:

Attach 12x metal dowels (H7) into the pre-drilled holes on panels, screw-in cam bolts must be screwed down flush.

STEP 5:

Attach bottom panel.

Attach bottom panel (G) onto side panels (A)(B) as shown. Ensure assembly dowel are aligned correctly with cam of matching parts before attaching.

Secure bottom panel (G) onto side panels (A)(B) using screwdriver to turn fitting cam to fix.

STEP 6:

Attach divider panels.

Attach divider panels (F) onto bottom panel (G) as shown. Ensure assembly dowel are aligned correctly with cam of matching parts before attaching.

Secure divider panels (F) onto bottom panel (G) using screwdriver to turn fitting cam to fix.

STEP 7:

Attach top panel.

Attach top panel (C) onto divider panels (F) and side panels (A)(B) as shown.

Ensure assembly dowel are aligned correctly with cam of matching parts before attaching.

Secure top panel (C) onto divider panels (F) and side panels (A)(B) using screwdriver to turn fitting cam to fix.

STEP 8:

Position back panel.

STEP 9:

Check the correct allocation of back panel.

Before attaching the back panel (D), checking the correct allocation.

STEP 10:

Attach back panel.

Attach back panel (D) onto back side of the unit using all 24x nail (H3), evenly distributed with the help of the nail holder (H4), as shown.

STEP 11:

Attach in by hand 2x support foot (H5) on bottom panel (G) using hammer.

STEP 12:

With help of an assistant carefully stand up the unit.

STEP 13:

Fix L bracket.

Fix the L Bracket (H9) under the top of the unit using washer (H10) and 3/8" screw (H13). Do not fully tighten.

Align the unit against the wall and mark the location of the L Bracket (H9) against the wall.

STEP 14:

Fix wall anchor to the wall.

Wood.

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure.

Drill 1/8 inch diameter pilot hole, at the height you marked with pencil.

Masonry or brick.

Drill 5/16 inch diameter pilot hole and 3/4 inch deep into the wall at the height you marked with pencil.

Drive plastic plug into the hole, using an hammer if needed.

Cavity wall.

Drill 5/16 inch diameter pilot hole at the height you marked with pencil. Drive plastic plug into the hole, using a hammer if needed.

STEP 15:

Fix the unit to the wall.

For safest use of product all units should be secured to the wall with anti-tip hardware.

If units are stacked or joined, it is required that units be secured to the wall with anti-tip hardware.

Fix the L Bracket (H9) to the wall using washer (H10) and 2 3/8" screw (H12). Tighten screw (H13) into unit and screw (H12) into wall.

STEP 16:

Insert 12x shelf pin (H2) as shown.

Position the shelf (E) on the shelf pin (H2) as shown.

Press firmly until you don't see the shelf pin (H2).

STEP 17:

Attach 3x screw cover stickers (H8) over camheads.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.