

## THRESHOLD CONWAY CAST IRON BOOKCASE

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck – though we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-855-MYTGTHOME (855-698-4846) to order missing supplies.

Use the carton as a work surface to prevent product damage during assembly.

Gather all tools prior to assembly.

*DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

### WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over: Install tip-over restraint provided.

Place heaviest items in the lowest drawers.

Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.

Never allow children to climb or hang on drawers, doors, or shelves.

Never open more than one drawer at a time.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

The required hardware parts are:

The cam locks are labeled as (H1) x 14.

The cam bolts are labeled as (H2) x 14.

The M8 x 30 mm wood dowels are labeled as (H3) x 12.

The 1/4" x 5/8" bolts are labeled as (H4) x 24.

The hex nut is labeled as (H5) x 1.

The 1/4" x 3/8" bolt is labeled as (H6) x 1.

The open wrench is labeled as (H7) x 1.

The hex wrench is labeled as (H8) x 1.

The tipping restraint hardware kit (inside plastic bag) is labeled as (H9) x 1.

The anti-tipping kit provided with the assembly parts include:

Short screw 1x.

Long screw 1x.

Metal brackets 2x.

Steel cable 1x.

The spare hardware parts are:

Cam lock 1x.

Cam bolt 1x.

M8 x 30 mm wooden dowel 1x.

1" bolt 1x.

5/8" bolt 1x.

Hex nut 1x.

The parts for assembly are identified alphanumerically for ease.

The left side frame is labeled as A.

The right side frame is labeled as B.

The top panel is labeled as C.

The three shelves are labeled as D.

The two metal stretchers are labeled as E.

The two side skirtings are labeled as F.

The bottom panel is labeled as G.

The front skirting is labeled as H.

The back skirting is labeled as I.

## HOW TO USE CAM LOCK SYSTEM

The cam bolt is inserted and secured in the respective hole on the panel.

The cam lock is inserted and secured in the hole present on the panel to be attached.

The panels are brought close to each other at right angles such that the cam bolt can be inserted into the cam lock of the respective panels.

With the help of a screwdriver, the cam lock is turned 180 degrees clockwise and tightened till the structure is perfectly secured.

Make sure the cam bolts have been screwed down flush and not left partially inserted.

### STEP 1:

Place G, H and I on a flat surface.

Screw-in ten H2 into G, two H2 into H, and two H2 into I.

Screw-in cam bolts must be screwed down flush.

### STEP 2:

Attach two H1 to each F. Screw in the two F to the ends of H and I using two H3 on each panel.

Attach the front and back skirting boards (H and I) between both side skirts (F) using two H3 on each skirting board.

### STEP 3:

Attach the assembled base (H, I and F) to the bottom panel (G) using ten H1 and eight H3.

### NOTE

Try working from one end to the other to slide the assembled base into place. You may need to push or pull the skirts or loosen the cam locks slightly to get them to align with the holes.

### STEP 4:

Place A and B on a flat surface.

Align and attach the shelves (D) to the side frames (A and B) with twelve H4 using H8.

### NOTE

Do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

#### STEP 5:

Align and attach the top panel (C) to the top of both side frames (A and B) with four H4 using H8.

#### NOTE

Do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

#### STEP 6:

Align and attach the top panel (C) to the top of both side frames (A and B) with four H4 using H8.

#### NOTE

DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

#### STEP 7:

Stand the unit upright.

Combine two metal stretchers (E) together and attach them to the back of the frames (A and B) with four H4, one H5, and one H6, using the H7 and H8.

#### STEP 8:

##### ANTI-TIPPING KIT INSTALLATION

1. Position a metal bracket below the top of the furniture. Mark & drill pilot hole into the center with the 1/8" drill bit. Attach a bracket to the furniture with the short screw provided.
2. Screw-in the other metal bracket to the wall with the long screw where the furniture will be kept.
3. Tread the steel cable through the brackets. Tighten the connector until snug. Do not overtighten.

#### NOTE

You must use this tipping restraint to attach this unit to the wall, to prevent accidents and/or injuries. The bookcase is now ready for use.

#### CARE AND MAINTENANCE

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Always use coasters under beverage glasses and flowerpots.

Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently.

Avoid rubbing.

Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.

Stains or marks from crayons or ink markers will be difficult to remove.

In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

Check bolts/screws and nuts periodically and tighten them if necessary.

#### FURTHER ADVICE ABOUT WOOD FURNITURE CARE

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

We hope you enjoy your purchase for many years.  
Thank you for your purchase!

#### QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one year from date of purchase.  
Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Customer Service: 1-855-MYTGTHOME (855-698-4846)  
8:30 a.m. - 4:30 p.m., PST, Monday to Friday  
[www.whalenfurniture.com](http://www.whalenfurniture.com)

#### WEIGHT LIMITS

The maximum recommended weight allowance is 22.7 kg/50 lb for shelves, top and bottom panels.

#### WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

Never allow children to climb or play with the TV or furnishing supporting the TV.

Never place toys, food, remote, etc. on top of the TV or TV furnishing.

Always use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

Never place a TV on furniture that is not intended to support a TV.

Never exceed the maximum size and weight of the TV shown in the instructions.

Be sure to refer to the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

Never exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible. Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

Always unload shelves and drawers, starting with the top surfaces, before moving.

Never push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.

Your assembly is complete. Your bookcase is now ready for use.

The red TARGET logo appears and fades from the screen.