

PORTOLA HILLS 3 SHELF HORIZONTAL BOOKCASE

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

Before you begin:

Check for damaged or missing parts. Call 1-855-MYTGTHM (855-698-4846) to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The head cap bolts are labeled as H1 x 24.

The flat washers are labeled as H2 x 24.

The Allen key is labeled as H3 x 1.

The 3/4" pan-head screws are labeled as H4 x 2.

The plastic restraints are labeled as H5 x 2.

The parts for assembly are identified alphanumerically for ease.

The three shelves are labeled as A.

The four legs are labeled as B.

STEP 1:

Attach the shelves (A) to the legs (B) using head cap bolts (H1) and flat washers (H2). Tighten the bolts (H1) using Allen key (H3).

STEP 2:

Attach the legs (B) to the unit using head cap bolts (H1) and flat washers (H2). Tighten the bolts (H1) using Allen key (H3).

STEP 3:

Attach the plastic restraints (H5) to the back of the unit using 3/4" pan-head screws (H4).

Attach the plastic restraints (H5) that is already attached to the unit to the wall using wall screw and anchor (not provided).

Use the adjuster attached to the legs to stabilize the bookcase.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.