

LORING WOOD WRITING DESK WITH DRAWERS

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

Before you begin:

IMPORTANT:

Complete all steps in this guide to ensure that drawers do not warp.

Check for damaged or missing parts. Call 1-800-440-0680 to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly. The unit requires two people to lift and assemble.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The 1/4" x 1/2" bolts are labeled as H1 x 16.

The M4.2 x 1-1/4" screws are labeled as H2 x 6.

The M3.5 x 7/16" screws are labeled as H3 x 2.

The wrench is labeled as H4 x 1.

The USB charging station is labeled as H5 x 1.

The parts for assembly are identified alphanumerically for ease.

The top is labeled as A.

The left side frame is labeled as B.

The right side frame is labeled as C.

The front support is labeled as D.

The rear support is labeled as E.

The bottom support is labeled as F.

STEP 1:

Attach the front, bottom and rear supports (D, E, F) to the left and right side frames (B, C) using four 1/4" x 1/2" bolts (H1) for each of the supports.

Do not fully tighten the bolts.

STEP 2:

Attach the top (A) to the assembled unit using six M4.2 x 1-1/4" screws (H2) and four 1/4" x 1/2" bolts (H1).

Apply firm pressure to align and fully tighten the screws and bolts.

STEP 3:

Attach the USB charging station (H5) to the assembled unit using two M3.5 x 7/16" screws (H3).

Fully tighten the screws.

Use the adjustable leveler at the legs to stabilize the unit.

NOTE:

USB OUTPUT: 5V DC

3500mA MAX

WARNING:

Please make sure that all the objects are removed before moving the assembled unit. The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse and/or serious injury.

Do not exceed the maximum loads. Exceeding the maximum load limits could cause sagging, instability, product collapse, and/or serious injury.

FCC INSTRUCTIONS:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Instructions shall caution users that modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CONTACT INFORMATION:

Target Corporation.

Minneapolis, Minnesota 55403.

Guest services: 1-800-440-0680.

Model number: BY213.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.