

HAVERHILL COFFEE TABLE

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

A hammer, a flat head screwdriver and a drill are needed for assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The long bolts are labeled as (H1) x 8.

The 1½" flat-head screws are labeled as (H2) x 8.

The spring washers are labeled as (H3) x 8.

The flat washers are labeled as (H4) x 8.

The allen key is labeled as (H5) x 1.

The parts for assembly are identified alphanumerically for ease.

The top panel is labeled as A.

The shelf is labeled as B.

The 2 long stretchers are labeled as C.

The 2 short stretchers are labeled as D.

The 4 legs are labeled as E.

STEP 1:

Attach legs to long stretcher using 1½" flat-head screws.

STEP 2:

Attach top panel to unit from step 1 using flat and spring washers and long bolt, tighten bolt using allen key.

STEP 3:

Attach short stretchers and shelf to unit using 1½" flat-head screws, flat and spring washers and long bolt, tighten bolt using allen key.

STEP 4:

Attach unit from step 1 to unit using 1½" flat-head screws, flat and spring washers and long bolt, tighten bolt using allen key.

STEP 5:

Level unit by adjusting the adjustable levelers on bottom of unit.

Your assembly is complete. Your unit is now ready for use.
The red TARGET logo appears and fades from the screen.