

PORTOLA HILLS CANED DOOR MEDIA STAND

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

Before you begin:

Check for damaged or missing parts. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The long bolts are labeled as H1 x 20.

The short bolts are labeled as H2 x 8.

The assembly screws are labeled as H3 x 4.

The 1/2" pan-head screws are labeled as H4 x 16.

The 5/8" flat-head screws are labeled as H5 x 12.

The 1/2" flat-head screws are labeled as H6 x 4.

The cam lock bolts are labeled as H7 x 4.

The cam locks are labeled as H8 x 4.

The hinges are labeled as H9 x 4.

The handles are labeled as H10 x 2.

The wooden dowels are labeled as H11 x 4.

The wedges are labeled as H12 x 12.

The shelf support pins are labeled as H13 x 4.

The corner plates are labeled as H14 x 8.

The washers are labeled as H15 x 12.

The large Allen key is labeled as H16 x 1.

The small Allen key is labeled as H17 x 1.

The parts for assembly are identified alphanumerically for ease.

The top panel is labeled as A.

The left rail is labeled as B.

The right rail is labeled as C.

The two caned assemblies are labeled as D.

The two caned doors are labeled as E.

The left front leg is labeled as F.

The left divider is labeled as the G.

The left back leg is labeled as H.

The right front leg is labeled as I.

The right divider is labeled as J.
The right back leg is labeled as K.
The shelf panel is labeled as L.
The base panel is labeled as M.
The back panel is labeled as N.

HOW TO USE CAM LOCK SYSTEM

The cam bolt is inserted and secured in the respective hole on the panel.
The cam lock is inserted and secured in the hole present on the panel to be attached.
The panels are brought close to each other at right angles such that the cam bolt can be inserted into the cam lock of the respective panels.
With the help of a screwdriver, the cam lock is turned 180 degrees clockwise and tightened till the structure is perfectly secured.
Make sure the cam bolts have been screwed down flush and not left partially inserted.

STEP 1:

Insert the cam lock bolts (H7) into the pre-drilled holes in the top panel (A), then tighten. Screw-in cam lock bolts (H7) must be screwed down flush.

STEP 2:

Insert the cam locks (H8) into the holes in the left and right rails (B, C).
Make sure the arrows of the cam locks (H8) are pointing towards the end of the panels.

STEP 3:

Attach the left and right dividers (G, J) to the base panel (M) using long bolts (H1) and corner plates (H14).
Tighten the long bolts (H1) using large Allen key (H16).

STEP 4:

Slide the back panel (N) into the groove of the unit.

STEP 5:

Attach the left and right rails (B, C) to the unit using long bolts (H1) and washers (H15).
Tighten the long bolts (H1) using large Allen key (H16).

STEP 6:

Attach the top panel (A) to the unit using cam locks (H8).

STEP 7:

Attach the left and right front legs (F, I) to the unit using long and short bolts (H1, H2), corner plates (H14) and washers (H15).
Tighten the long and short bolts (H1, H2) using large Allen key (H16).

STEP 8:

Attach the left and right back legs (H, K) to the unit using long and short bolts (H1, H2), corner plates (H14) and washers (H15).
Tighten the long and short bolts (H1, H2) using large Allen key (H16).

STEP 9:

Attach the caned assemblies (D) to the unit using assembly screws (H3) and wooden dowels (H11).

Tighten the assembly screws (H3) using small Allen key (H17).

STEP 10:

Attach the wedges (H12) to the unit using 5/8" flat-head screws (H5).

Use the adjuster attached to the legs to stabilize the media stand.

STEP 11:

Attach the hinges (H9) to the doors (E) using 1/2" pan-head screws (H4).

STEP 12:

Attach the handles (H10) to the doors (E) using 1/2" flat-head screws (H6).

STEP 13:

Attach the doors (E) to the unit using 1/2" pan-head screws (H4).

STEP 14:

The front middle screw on the hinge (H9) will adjust your door forward or backward.

The back middle screw on the hinge (H9) will adjust your door to the left and right.

The screw on the hinge (H9) base will adjust your door up and down.

STEP 15:

Insert the shelf support pins (H13) into the left and right dividers (G, J) at desired level.

Place the shelf panel (L) into position.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.