

## WOOD AND METAL CONSOLE TABLE

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-855-698-4846 (855-MYTGTHOME) to order missing supplies.

Use the carton as working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

*DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The required hardware parts are:

The 1/4" x 15 mm small hex screws are labeled as (H1) x 15.

The 1/4" x 28 mm large hex screws are labeled as (H2) x 4.

The hex key is labeled as (H3) x 1.

The 1/2" small pan head screw is labeled as (H4) x 1.

The 2" large pan head screw is labeled as (H5) x 1.

The safety strap is labeled as (H6) x 1.

The dry wall anchor is labeled as (H7) x 1.

The parts for assembly are identified alphanumerically for ease.

The top shelf is labeled as A.

The bottom shelf is labeled as B.

The left side frame is labeled as C.

The right side frame is labeled as D.

The two cross braces are labeled as E.

### WARNING:

Children have died from furniture tipover. To reduce the risk of furniture tipover

ALWAYS install tipover restraint provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

### SAFETY PRECAUTIONS:

This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.

Always unload unit prior to moving the unit. The weight of personal belongings can cause the unit to become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.

Do not overload unit. If any shelf, top, or bottom of unit bows or bends, it is overloaded. The shelf, top, or bottom could collapse and cause serious bodily injury and/or damage to personal belongings.

Do not climb or step on the unit. This is not a bench. The unit may become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.

Do not use this unit as a television stand. Serious bodily injury and/or damage to personal belongings may occur.

Do not mount or attach anything to the sides, rear or front of the unit as this can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.

Do not stack units. Stacking of units can cause an unsafe tip-over hazard which may cause serious bodily injury and/or damage to personal belongings.

Do not hang this unit on the wall. The product structure is not designed for wall hanging. Serious bodily injury, damage to personal belongings, and/or damage to the wall may occur.

All units must be secured individually to wall stud using hardware provided. If wall stud is not accessible, consult your local hardware store for appropriate mounting hardware. Failure to do so may create an unsafe tipping hazard that could lead to serious bodily injury and/or damage to personal belongings.

Follow proper safety procedures if using power tools and ladders.

We recommend you protect your work surface during assembly to prevent scratching or damage to table top, wood floors, etc.

We recommend you hand-tighten screws. Use care not to overtighten if using power tools.

#### STEP 1:

Attach left side frame (C) and right side frame (D) to hole locations on top shelf (A) using twelve small hex screws (H1).

Tighten all screws with allen wrench (H3) securely.

Attach one end of safety strap (H6) to center hole location on top shelf (A) using one small pan head screw (H5).

#### STEP 2:

Align holes on the bottom shelf (B) to the holes located on frames (C) and (D).

Attach bottom shelf (B) to frames using four large hex screws (H2).

Tighten all screws with allen wrench (H3) securely.

#### STEP 3:

Attach cross braces (E) to right side frame (D) and left side frame (C) using two small hex screws (H1).

Attach both cross braces (E) to desktop (A) by overlapping the end tabs and securing using one small hex screw (H1).

Tighten all screws with allen wrench (H3) securely.

#### STEP 4:

Position the unit in the desired location. If necessary, adjust the floor levelers to level the unit.

#### STEP 5:

Carefully stand your unit upright into position against a wall. All units **MUST** be fastened to the wall.

Option 1: Place small hole end of safety strap (H6) against wall/wall stud. Use large pan head screw (H5) to secure safety strap (H6) to wall stud.

Option 2: Drill 1/8" pilot hole in drywall, insert drywall anchor (H7) into hole.

Place small hole end of safety strap (H6) against wall anchor (H7). Use large pan head screw (H5) to secure safety strap (H6) to wall anchor (H7).

**WARNING:**

All units must be fastened to the wall.

**WEIGHT CAPACITY:**

Upto 60".

Top shelf - 90 lbs.

Bottom shelf - 50 lbs.

This unit has been designed for the weight shown. Exceeding this recommended weight could result in excessive "sagging" of the top or shelves. Extreme overloading can cause failure of the unit and possible injury.

**CARE INSTRUCTIONS:**

Dust with a soft, clean cloth that will not scratch the surface.

Do not use furniture polish.

Using solvents of any kind may cause damage to the finish.

Always use coasters under beverage glasses and flowerpots.

Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill. Avoid rubbing.

Avoid direct placement of hot dishes or plates. Heat can cause damage to the finish.

Check fasteners such as screws/nuts periodically and tighten if necessary.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.