

MESA VERDE WOOD CURVED LEG ACCENT TABLE

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

Before you begin:

Check for damaged or missing parts. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The socket head cap bolts are labeled as H1 x 3.

The spring washers are labeled as H2 x 3.

The Allen key is labeled as H3 x 1.

The parts for assembly are identified alphanumerically for ease.

The top assembly is labeled as A.

The leg assembly is labeled as B.

STEP 1:

Attach the leg assembly (B) to the top assembly (A) using socket head cap bolts (H1) and spring washers (H2).

Tighten the bolts using Allen key (H3).

STEP 2:

Use the adjustable levelers at the legs to stabilize the unit.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.