

GELLER MODERN DINING CHAIR

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

Before you begin:

Check for damaged or missing parts. Call 800-542-7553 or email support@skylinefurnituremfg.com to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The 2 in hex bolts are labeled as H1 x 8.

The spring washers are labeled as H2 x 8.

The flat washers are labeled as H3 x 8.

The hex wrench is labeled as H4 x 1.

The parts for assembly are identified alphanumerically for ease.

The chair seat is labeled as A.

The two front facing legs are labeled as B.

The two back facing legs are labeled as C.

STEP 1:

Open the box and take out the legs (B, C). Peel back the fabric cover on the chair seat (A).

Attach the front facing and back facing legs (B, C) to the chair seat (A).

STEP 2:

Using hex bolts (H1), spring washer (H2) and flat washer (H3), secure the legs (B, C) to the chair seat (A). Do not tighten the bolts.

STEP 3:

Turn the chair upright on a level surface, push the legs (B, C) up or down as necessary to level.

Once leveled, tighten all the bolts (H1) securely using the hex wrench (H4).

Use the adjuster attached to the legs (B, C) to stabilize the unit.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.