

CALLA CANOPY PATIO ACCENT CHAIR

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you.

All you need to do is follow our simple instructions and you'll be on your way to transforming your patio in no time.

Good luck – though we're confident you won't need it.

IMPORTANT WARNING:

Unpack the box on a clean soft level surface and make sure all parts have been included.

To replace missing or damaged parts please call 855-MYTGTHOME (855-698-4846) during 7am - 7pm CST M-F, and 8am - 5pm CST Saturday.

This Chair is not intended for use during any kind of inclement weather and the manufacturer is not, and cannot be held responsible for any damages caused as a result of such weather.

Weather-related damage, or damage as a result of the Table not being stored properly when not in the responsibility of the manufacturer.

During extended periods of non-usage, off season, or in inclement weather (wind, rain, snow, hail, and sleet), freezing conditions and extreme heat, the Chair needs to be stored in a dry, sheltered place to prolong the life and to avoid damage to the Chair.

WARRANTY:

This chair comes with a one year limited warranty against original manufacture defects. If you experience trouble with your chair, please call the customer service number below.

Target Corporation

Toll Free at: 855-MYTGTHOME (855-698-4846) during 7am - 7pm CST M-F, and 8am - 5pm CST Saturday.

Code: Yotrio 2021

Before you begin

Check for damage or missing parts. Call 855-MYTGTHOME (855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product.

Target will not be liable for any damage or injury based on your reliance on the content provided.

The hardware parts are labeled below

The M6*25mm bolts with washers are labeled as (Part H)×4.

The M6*40mm bolts with washers are labeled as (Part I)×6.

The allen wrench is labeled as (Part J)×1.

ATTENTION: THE HARDWARE KIT IS FOR 2 CHAIRS.

The assembly parts are labeled below

The back frame is labeled as A.

The right arm is labeled as B.

The left arm is labeled as C.
The seat frame is labeled as D.
The two front tubes are labeled as E.
The two back tubes are labeled as F.
The top canopy is labeled as G.

STEP 1:

Attach the right arm (B) to the seat frame (D) by lining up bolt holes on the seat frame (D) with corresponding bolt holes on the right arm (B). Secure with M6*40mm bolt with washer (I) by using allen wrench (J).

ATTENTION: To avoid damage to your new patio furniture, please use either the carton or another soft surface such as carpet as a working surface to prevent product damage during assembly.

Do not completely tighten screws until all screws are in place.

STEP 2:

Attach the left arm (C) to the seat frame (D) by lining up bolt holes on the seat frame (D) with corresponding bolt holes on the left arm (C). Secure with M6*40mm bolt with washer (I) by using allen wrench (J).

Do not completely tighten screws until all screws are in place.

STEP 3:

Attach the back frame (A) to the right arm (B) and left arm (C) by lining up bolt holes. Secure with M6*25mm bolt with washer (H) by using allen wrench (J).

Do not completely tighten screws until all screws are in place.

STEP 4:

Insert the front tube (E) and back tube (F) into the right arm (B) and left arm (C).

Do not completely tighten screws until all screws are in place.

STEP 5:

Put the top canopy (G) on the top of the front tubes (E) and back tubes (F).

Do not completely tighten screws until all screws are in place.

STEP 6:

Tighten all the bolts.
Turn the chair to upright position onto a flat level surface.
Put the cushions on the chair.

For longer life, cover and store when not in use.

FRAME CARE:

Wipe clean with a damp cloth. Use only mild soap and detergents.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.