SOUTHPORT EGG CHAIR WITH NATURAL/WHITE METAL LEGS

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

IMPORTANT WARNING:

Unpack the box on a clean, soft, level surface and make sure all parts have been included. To replace missing or damaged parts please call 855-MYTGTHOME (855-698-4846) during 7am - 7pm CST M-F, and 8am - 5pm CST Saturday.

ATTENTION:

This Chair is not intended for use during any kind of inclement weather and the manufacturer is not, and cannot be held responsible for any damages caused as a result of such weather. Weather-related damage, or damage as a result of the Chair not being stored properly when not in use, is not the responsibility of the manufacturer.

During extended periods of non-usage, off season, or in inclement weather (wind, rain, snow, hail, sleet), freezing conditions and extreme heat, the Chair needs to be stored in a dry, sheltered place to prolong the life and to avoid damage to the Chair.

WARRANTY

This Chair comes with a one year limited warranty against original manufacture defects. If you experience trouble with your chair, please call the customer service number below.

Target Corporation Toll Free at: 855-MYTGTHOME (855-698-4846) during 7am - 7pm CST M-F, and 8am - 5pm CST Saturday. Code: Yotrio 2022

Before you begin:

Check for damage or missing parts. Call 855-MYTGTHOME (855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are: The M6*20mm bolts with washers are labeled as (Part D) x 5. The M6*50mm bolts with washers are labeled as (Part E) x 4. The M6 nuts are labeled as (Part F) x 4. The washers are labeled as (Part G) x 4. The connecting are labeled as (Part H) x 2. The hex wrench is labeled as (Part I) x 1. The allen wrench is labeled as (Part J) x 1. The parts for assembly are identified alphanumerically for ease. The back frame is labeled as A. The seat frame is labeled as B. The leg frame is labeled as C.

STEP 1:

ATTENTION: To avoid damage to your new patio furniture, please use either the carton or another soft surface such as carpet as a working surface to prevent product damage during assembly.

Place the seat frame (B) upside down on a soft surface such as carpet. Attach the leg frame (C) to the seat frame (B) by lining up screw holes on the seat frame (B) with corresponding screw holes on the leg frame (C). Secure with M6*20mm bolt with washer (D), tighten using allen wrench (J).

Do not completely tighten screws until all screws are in place.

STEP 2:

Place the leg frame (C) and seat frame (B) right side up on a soft surface such as carpet. Attach the back frame (A) to the seat frame (B) and leg frame (C) by lining up screw holes on the seat frame (B) with corresponding screw holes on the back frame (A). Insert the connecting (H) into the upper and lower tube.

Do not completely tighten screws until all screws are in place.

STEP 3:

Attach the back frame (A) to the seat frame (B) and leg frame (C) by lining up screw holes on the seat frame (B) with corresponding screw holes on the back frame (A). Secure with M6*50mm bolt with washer (E), washer (G) and M6 nut (F), tighten using allen wrench (J) and hex wrench (I).

Do not completely tighten screws until all screws are in place.

STEP 4: Tighten all the screws. Turn the chair to upright position on a flat level surface. Put the cushion on the chair.

Frame Care: Wipe clean with damp cloth. Use only mild soap and detergents.

Your assembly is complete. Your unit is now ready for use. The red TARGET logo appears and fades from the screen.