

BELMAR WOVEN MIXED MATERIAL ACCENT TABLE KNOCK DOWN WITH DRAWER

Congratulations on your latest purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you.

All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck-though we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

TOOLS NEEDED (NOT INCLUDED)

Phillips head screwdriver

The hardware parts are labeled below

The head cap bolts are labeled as (H1) x 10.

The spring washers are labeled as (H2) x 6.

The flat washers are labeled as (H3) x 10.

The allen key is labeled as (H4) x 1.

The assembly parts are labeled alphabetically for ease.

The top unit is labeled as A.

The two legs are labeled as B.

The bottom leg is labeled as C.

STEP 1:

Pull out the drawer from A to empty the space inside.

STEP 2:

Attach legs to the unit A using six H1, six H3, and six H2, three on each side on the inside.

Tighten the bolts using the H4.

STEP 3:

Attach the bottom leg to the unit using long head cap bolts and flat washers, then tighten bolts using allen key.

STEP 4:

Complete the assembly by sliding in the drawer. Adjust the levelers on all four legs to stabilize the coffee table.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.