

60" WOOD AND METAL TV STAND

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-855-698-4846 (855-MYTGTHOME) to order missing supplies.

Use the carton as working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The 1/4" x 15mm small hex screws are labeled as (H1) x 18.

The 1/4" x 32mm large hex screws are labeled as (H2) x 6.

The 1/4" hex key is labeled as (H3) x 1.

The 1/2" small pan head screws are labeled as (H4) x 2.

The 2" large pan head screws are labeled as (H5) x 2.

The safety straps are labeled as (H6) x 2.

The dry wall anchors are labeled as (H7) x 2.

The parts for assembly are identified alphanumerically for ease.

The top shelf is labeled as A.

The bottom shelf is labeled as B.

The three frames are labeled as C.

WARNING:

Use of a TV that is too heavy or large is hazardous. A TV that is too heavy will create a risk of tip-over that can cause severe injury or death. A TV that is too large for the available space might be accidentally pushed or bumped off the furniture, or subject to tip-over.

Check the size and weight of your TV. Compare it to the diagram below – before you begin assembly!

This unit is designed for use with televisions weighing less than 90 pounds (40.8 Kg) and maximum size 60". Never use with a TV that weighs more.

Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

The size of the television, front-to-back and side-to-side, must fit within the space defined in the diagram.

Never place the front edge of the TV past the front edge of the TV support shelf (or stop molding – if equipped).

Never allow the sides of the TV to extend past the side edges of the TV support surface.

This product is designed/intended to support flatscreen TV's only. This unit is not intended for use with CRT TV's.

Be sure to follow the attached warning label, the label provides important safety related information.

This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.

WARNING:

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

Never allow children to climb or play with the TV or furnishing supporting the TV.

Never place toys, food, remote, etc on top of the TV or TV furnishing.

Always use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

Never place a TV on furniture that is not intended to support a TV.

Never exceed the maximum size and weight of the TV shown in the instructions.

Be sure to apply the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

Never exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible.

Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

Always unload shelves and drawers, starting with the top surfaces, before moving.

Never push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.

STEP 1:

Attach each frame (C) to hole locations on top shelf (A) using three small hex bolts (H1) each.

Tighten all bolts with allen wrench (H3) securely.

Attach one end of safety straps (H6) to hole locations on desktop (A) using one small pan head screw (H4) each.

STEP 2:

Align holes on the bottom shelf (B) to the holes located on each frame (C).

Attach bottom shelf (B) to each frame using two large hex screws (H2) each.

Tighten all screws with allen wrench (H3) securely.

STEP 3:

Position the unit in the desired location. If necessary, adjust the floor levelers to level the unit.

STEP 4:

Carefully stand your unit upright into position against a wall. All units **MUST** be fastened to the wall.

Option 1: Place small hole end of safety strap (H6) against wall/wall stud. Use large pan head screw (H5) to secure safety strap (H6) to wall stud.

Option 2: Drill 1/8" pilot hole in drywall, insert drywall anchor (H7) into hole.
Place small hole end of safety strap (H6) against wall anchor (H7). Use large pan head screw (H5) to secure safety strap (H6) to wall anchor (H7).

WEIGHT CAPACITY:

Upto 60".

Top shelf - 90 lbs.

Bottom shelf - 50 lbs.

This unit has been designed for the weight shown. Exceeding this recommended weight could result in excessive "sagging" of the top or shelves. Extreme overloading can cause failure of the unit and possible injury.

CARE INSTRUCTIONS:

Dust with a soft, clean cloth that will not scratch the surface.

Do not use furniture polish.

Using solvents of any kind may cause damage to the finish.

Always use coasters under beverage glasses and flowerpots.

Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill. Avoid rubbing.

Avoid direct placement of hot dishes or plates. Heat can cause damage to the finish.

Check fasteners such as screws/nuts periodically and tighten if necessary.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.