

FUTON SOFA

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you will be on your way to transforming your room in no time.

Good luck -- though we are confident you won't need it.

IMPORTANT:

Parts and hardware required to assemble this unit can be found in the zippered compartment underneath the seat.

Before you begin:

Check for damaged or missing parts. Call 1- 855-698-4846 (855-MYTGTHOME) to order missing supplies. Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

The required hardware parts are:

The 5/16" x 30mm bolts are labeled as H1 x 4.

The 5/16" x 19mm bolts are labeled as H2 x 4.

The 5mm hex key is labeled as H3 x 1.

The parts for assembly are identified alphanumerically for ease.

The seat is labeled as A.

The two back cushions are labeled as B.

The two back cushion covers are labeled as C.

The left arm is labeled as D.

The right arm is labeled as E.

The four corner legs are labeled as F.

The two middle legs are labeled as G.

SAFETY PRECAUTIONS:

WARNING:

This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.

This futon has been designated for seating and as an alternate sleep product for two average adults. Children under the age of five, small infants and babies must not sleep on this futon.

This product is designed for home use and not intended for commercial use.

To avoid tipping, do not sit, lay or stand on the edge of the unit when the futon is in sleeping position.

Do not allow children to climb or play on the unit as the unit may become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.

STEP 1:

Take out the hardware and legs from inside the futon body.
Unfold the futon and lay on the floor with the bottom facing up.

STEP 2:

Attach the middle legs (G) to the futon base using hex bolts (H1) and flat washers (H2).
Tighten the bolts using hex key (H3) securely.

STEP 3:

Screw the corner legs (F) into the hole locations on the base.
Tighten the legs by hand securely.

STEP 4:

It is recommended that two people move the unit.
Carefully lift and rotate the unit onto the legs. Do not allow the futon to fold in the middle when upside down.

STEP 5:

Remove the arms, cushions and back cushion covers from inside the seat.
Lift the left arm (D) and align the metal plates on the arm with the metal plates on the sofa and slide into place from top to bottom. Repeat the above steps to assemble the right arm (E).

STEP 6:

Using scissors, carefully remove the back cushions (B) from the plastic bag. Fluff the cushions.
Insert the back cushions (B) into the back cushion covers (C).

STEP 7:

Connect the USB power cord to a 120V power source.

STEP 8:

CONVERTING TO SOFA:

In flat position, lift the backrest upwards with each click sound until you reach the desired sofa position.

CONVERTING TO BED:

In sofa position, lift the backrest all the way forward until the last click is heard which unlocks the mechanism. Carefully return the back to a flat position.

STEP 9:

Carefully lift the seat bottom to access the hidden storage underneath.

WEIGHT CAPACITY/ CARE INSTRUCTIONS:

WARNING:

MAXIMUM WEIGHT CAPACITY: 300 lbs.

Exceeding the recommended weight loading capacity could cause failure of the unit and possible injury.

CARE INSTRUCTIONS:

Check the fasteners such as screws/ nuts periodically and tighten if necessary.
Spot and wipe clean with damp cloth and neutral detergent. Avoid strong chemicals or bleach.
Move the unit carefully with two people. Lift and carry the unit, never push or drag the unit.

Your assembly is complete. Your unit is now ready for use.
The red TARGET logo appears and fades from the screen.