

MODERN 4 DRAWER DRESSER

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Visit www.sauder.com/services to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product.

Target will not be liable for any damage or injury based on your reliance on the content provided.

The parts for assembly are identified alphanumerically for ease.

The right end is labeled as A.

The left end is labeled as B.

The top is labeled as C.

The three braces are labeled as D.

The four right drawer sides are labeled as D44.

The four left drawer sides (1 with label) are labeled as D45.

The four drawer backs are labeled as D182.

The four drawer bottoms are labeled as D988.

The bottom is labeled as E.

The two side skirts are labeled as F.

The skirt is labeled as G.

The upper drawer front is labeled as H.

The three lower drawer fronts are labeled as J.

The lower back is labeled as K.

The upper back is labeled as L.

The four drawer braces are labeled as M67.

(Hidden part using recycled material. Color may vary.)

The required hardware parts are:

Universal cabinet rail (35AA) x 8.

Drawer right (35AC) x 4.

Drawer left (35AD) x 4.

Hidden cam (1F) x 18.

Cam dowel (2F) x 18.

Wood dowel (15F) x 16.

Metal bracket (4G) x 2.

Drawer front bracket (8G) x 4.

Nail (1N) x 21.

Furniture tipping restraint kit (97) x 1.

Black 9/16" large head screw (1S) x 28.

Gold 5/16" flat head screw (3S) x 32.

Black 1-9/16" flat head screw (30S) x 20.

Black 1-15/16" flat head screw (113S) x 4.

HOW TO USE CAM LOCK SYSTEM

The cam bolt is inserted and secured in the respective hole on the panel.

Align cam bolts with cam(s) hole and insert all the way.

Push cam lock into cam hole which are inserted by cam bolt – Arrow feature on cam lock points to panel edge.

With the help of a screwdriver, the cam lock is turned 190-230 degrees clockwise and tightened till the structure is perfectly secured.

Panels should be tight against each other and connection should be rigid.

STEP 1:

Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.

Fasten the Universal Cabinet Rails* (35AA) to the Ends (A and B). Use sixteen Gold 5/16" Flat Head Screws (3S) through holes #1 and #3.

STEP 2:

Push eight Hidden Cams (1F) into the Ends (A and B) and Lower Back (K). Then, insert the metal end of a Cam Dowel (2F) into each Hidden Cam.

NOTE:

Do not tighten the Hidden Cams in this step.

STEP 3:

Fasten the Ends (A and B) to the Lower Back (K). Tighten four Hidden Cams.

CAUTION:

Do not stand the unit upright without the Back fastened. The unit may collapse.

Risk of damage or injury. Hidden Cams must be completely tightened. Hidden Cams that are not completely tightened may loosen, and parts may separate.

STEP 4:

Insert twelve Wood Dowels (15F) into the Braces (D).

Insert the Wood Dowels in the Braces (D) into the Ends (A and B).

NOTE:

You will need to gently flex the Ends out slightly to insert the Wood Dowels into the holes in the Ends.

STEP 5:

Open the Furniture Tipping Restraint Kit (97), and fasten the Safety Strap to the Top (C). Use the short screw provided.

NOTE:

Position the Safety Strap exactly as shown.

Fasten the Top (C) to the Ends (A and B). Tighten four Hidden Cams.

STEP 6:

Push six Hidden Cams (1F) into the Skirts (F and G). Then, insert the metal end of a Cam Dowel (2F) into each Hidden Cam.

Fasten two Metal Brackets (4G) to the Skirt (G) exactly as shown. Use two Black 9/16" Large Head Screws (1S).

NOTE:

Do not tighten the Hidden Cams in this step.

Be sure the Brackets are even with the edge of the Skirt.

STEP 7:

Fasten the Side Skirts (F) to the Skirt (G). Tighten two Hidden Cams.

Fasten the Side Skirts (F) to the Bottom (E). Tighten four Hidden Cams.

Fasten the Brackets on the Skirt (G) to the BOTTOM (E). Use two Black 9/16" Large Head Screws (1S).

STEP 8:

Insert four Wood Dowels (15F) into the Ends (A and B).

Fasten the Bottom (E) to the Ends (A and B). Use four Black 1-15/16" Flat Head Screws (113S).

NOTE:

You should start each Screw a few turns before completely tightening any of them.

Be sure the Wood Dowels in the Ends insert into the Bottom.

STEP 9:

Carefully turn your unit over onto its front edges. Lay the Upper Back (L) over your unit.

Push the Safety Strap through the large hole in the Upper Back (L).

Fasten the bottom edge of the Upper Back (L) to the Lower Back (K). Use eight Black 9/16" Large Head Screws (1S).

Fasten the Upper Back (L) to the Ends (A and B) and Top (C) using the Nails (1N).

CAUTION:

Do not stand the unit upright without the Back fastened. The unit may collapse.

STEP 10:

Carefully stand your unit upright in its final location against a wall. We recommend using the Safety Strap for added stability.

NOTE:

Do not turn the Safety Drywall Anchor into a wall stud. If you prefer to fasten the Safety Strap to a wall stud, go to your local hardware store for proper hardware.

INSTALLATION INSTRUCTIONS:

Insert the Safety Drywall Anchor through the Washer and the end of the Safety Strap.

Using a Phillips screwdriver or a hand drill, press the screw slightly onto the drywall just below the top surface of your unit so the Safety Strap will not be visible.

Apply pressure; turn the screw until a pilot hole is made and the nylon sheath slips through.

Turn the screw until it is flush against the wall and you feel a firm resistance.

Continue to turn until the screw starts spinning freely.

NOTE:

Before moving your unit to a different location, unscrew the Safety Drywall Anchor from your wall. The nylon sheath will remain behind your wall

STEP 11:

Pull the Drawer Front Brackets (8G) apart and slide them into the grooves in the Drawer Sides (D44 and D45). You may need to gently tap them in with a hammer.

NOTE:

The Drawer Front Brackets are marked "RH" and "LH" for easy identification.

Fasten the Drawer Front Brackets (8G) to the Upper Drawer Front (H). Use four Black 9/16" Large Head Screws (1S).

Slide a Drawer Bottom (D988) into the grooves in the Drawer Sides (D44 and D45) and Upper Drawer Front (H).

STEP 12:

Push one Hidden Cam (1F) into a Drawer Brace (M67). Then, insert the metal end of a Cam Dowel (2F) into the Hidden Cam.

Fasten the Drawer Brace (M67) to the Upper Drawer Front (H). Tighten one Hidden Cam.

Fasten a Drawer Back (D182) to the Drawer Sides (D44 and D45) and Drawer Brace (M67).

Use five Black 1-9/16" Flat Head Screws (30S).

NOTE:

You should start each Screw a few turns before completely tightening any of them.

Repeat Steps 11-12 for the lower drawers. The angled edge of the lower drawer front will be opposite from the upper drawer front.

STEP 13:

Fasten a Drawer Right (35AC) to the Right Drawer Side (D44) and a Drawer Left (35AD) to the Left Drawer Side (D45). Use four Gold 5/16" Flat Head Screws (3S) through holes #1 and #2.

NOTE:

The glides are not intended to rotate.

Repeat this step for the other drawers.

STEP 14:

To insert the drawer into your unit, tip the front of the drawer down and drop the glides on the drawer behind the glides on the unit. Lift the front of the drawer up and slide it into the unit.

ADJUST DRAWER:

Open the drawer. Loosen the Screws securing the Drawer Sides. Adjust the Drawer Front up or down as needed. Tighten the Screws. If further adjustments are needed, loosen the Screw in the slotted hole on the Drawer Side. Adjust the drawer up or down as needed. Tighten the Screw.

WEIGHT LIMITS:

Dresser top: 25 lbs.

All drawers: 25 lbs.

1-YEAR LIMITED WARRANTY:

1. Sauder Woodworking Co. (Sauder®) provides limited warranty coverage to the original purchaser of this product for a period of one year from the date of purchase against defects in materials or workmanship of Sauder furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

2. There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care. There is also no warranty coverage for rented products or any products purchased "used" or "as is", at a distress or going-out-of business sale, or from a liquidator.

3. As the exclusive remedy under this Warranty, Sauder will (at its sole option) repair, replace or refund the value of any defective furniture component. Sauder may require independent confirmation of the claimed defect and proof of purchase. Replacement parts will be warranted for only the remaining period of the original Warranty. Sauder shall have no liability for any

incidental or consequential damages of any kind and all such damages are excluded from this warranty, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

4. This Warranty applies only to warranted defects that first arise and are reported to Sauder within the warranty coverage period. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

5. There are no other warranties applicable to this product. Under the laws of certain states, there may be no implied warranties from Sauder and all implied warranties, including any implied warranty of merchantability or fitness for a particular purpose are disclaimed where allowed by law. To the extent any implied warranties are applicable, any implied warranties, including any implied warranty of merchantability or fitness for a particular purpose, are limited in duration to the duration of this express warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you.

6. For Warranty inquiries or claims, please visit our website www.sauder.com. You can also contact Sauder at 1.800.523.3987. Sauder may require Warranty claims to be submitted in writing to: Sauder Woodworking Co., 502 Middle Street, Archbold, OH 43502 USA. Please include your sales receipt or other proof of purchase and a specific description of the product defect.

WARNING:

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information. Death or serious injury may occur when children climb on furniture. A remote control, toys or other items placed on the furniture may encourage a child to climb on the furniture which could cause it to tip-over and result in serious injury or death.

Never allow children to climb on furniture.

Never place toys, food, remote, etc. on top of furniture.

Always use either the safety hardware as instructed or other wall anchoring device.

Placing audio and/or video equipment onto furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or tip over.

Never place a TV on furniture that is not intended to support a TV.

This product is not designed to support a television unless a TV warning label is included and the instructions specifically state the size and weight of the television.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

Never exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible.

Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

Always unload shelves and drawers, starting with the top surfaces, before moving.

Never push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.