

ASTRID MID CENTURY 60"-72" DINING TABLE WITH EXTENSION LEAF

Congratulations on your latest Target purchase.
Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.
Good luck – though we're confident you won't need it.

Before you begin
Check for damaged or missing parts. Call 1-855-MYTGTHOME (855-698-4846).
Use the carton as a work surface to prevent product damage during assembly.
Gather all tools prior to assembly.

DISCLAIMER: *This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The required hardware parts show up on the screen.
The M8 spring washers are marked as (H1) x 8.
The M8 flat washers are marked as (H2) x 8.
The M8x12 nuts are marked as (H3) x 8.
The Allen key is marked as (H4) x 1.

The parts for assembly are identified alphanumerically for ease.
The top table is labeled as A.
The Extension leaf is labeled as B.
The legs are labeled as C.

STEP 1:

First, the C should be positioned on all the four corners of the underside of the A. Attach them to the A with H1, H2, and H3. Now, the C should be tightened with the help of H4.

STEP 2:

To extend, first unfasten both the lock on the underside of the A and pull it apart. Now, insert the B by aligning pins to either side of the table.

STEP 3:

Push the A back together and ensure that the B fits well. Now refasten the locks on the underside of the A to secure the whole table.
You can adjust the height of the table with the floor levelers attached at the bottom of the legs.

Your assembly is now complete. Your table is now ready for use.

The red TARGET logo appears and fades from the screen.