

## 32" ARCHES CABINET

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

Before you begin:

Check for damage or missing parts. Call 1-855-MYTGTHOME (1-855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

*DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The required hardware parts are:

The bolts are labeled as (H1) x 8.

The 1/2" pan-head screws are labeled as (H2) x 16.

The 5/8" flat-head screws are labeled as (H3) x 12.

The cam lock bolts are labeled as (H4) x 17.

The cam locks are labeled as (H5) x 17.

The handle bolts are labeled as (H6) x 2.

The handles are labeled as (H7) x 2.

The hinges are labeled as (H8) x 4.

The dowels are labeled as (H9) x 8.

The wedges are labeled as (H10) x 12.

The shelf pins are labeled as (H11) x 4.

The spring washers are labeled as (H12) x 8.

The washers are labeled as (H13) x 8.

The allen key is labeled as (H14) x 1.

The 3/4" pan-head screws are labeled as (H15) x 4.

The plastic restraints are labeled as (H16) x 2.

The parts for assembly are identified alphanumerically for ease.

The top panel is labeled as A.

The top rail is labeled as B.

The two side panels are labeled as C.

The shelf panel is labeled as D.

The bottom assembly is labeled as E.

The back panel is labeled as F.

The four legs are labeled as G.

The left door is labeled as H.

The right doors are labeled as I.

### HOW TO USE CAM LOCK SYSTEM

The cam bolt is inserted and secured in the respective hole on the panel.

The cam lock is inserted and secured in the hole present on the panel to be attached.

The panels are brought close to each other at right angles such that the cam bolt can be inserted into the cam lock of the respective panels.

With the help of a screwdriver, the cam lock is turned 180 degrees clockwise and tightened till the structure is perfectly secured.

Make sure the cam bolts have been screwed down flush and not left partially inserted.

**STEP 1:**

Insert cam lock bolts into pre-drilled holes in top and side panels and bottom assembly.

Screw-in cam lock bolts must be screwed down flush.

**STEP 2:**

Insert cam locks into pre-drilled holes of top rail and side panels.

Make sure the arrow of cam locks are pointing towards the end of the panel.

**STEP 3:**

Attach top rail to side panels using cam locks.

**STEP 4:**

Attach top panel to unit using cam locks and dowels.

**STEP 5:**

Slide back panels into groove.

**STEP 6:**

Attach bottom assembly to unit using cam locks and dowels.

**STEP 7:**

Attach legs to unit using bolts, spring washers and flat washers.

Tighten bolts using allen key.

**STEP 8:**

Attach wedges to unit using 5/8" flat-head screws.

Adjust the adjuster that has attached to the legs to stabilize your unit.

**STEP 9:**

Attach hinges to doors using 1/2" pan-head screws.

**STEP 10:**

Attach handles to doors using handle bolts.

**STEP 11:**

Attach doors to the unit.

**STEP 12:**

Front middle screw on hinge will adjust your door to the left and right.

Screw on hinge base will adjust your door up and down.

**STEP 13:**

Place shelf panel into position.

**STEP 14:**

Insert shelf pins into left panel at desired level.

Place the left side of the shelf panel into position.

Holding it on the right side of the shelf panel higher than the desired level, insert the rest shelf pins into right panel at desired level.

Place the right side of the shelf panel into position.

**STEP 15:**

Attach plastic restraint to back of unit using 3/4" pan-head screws.

Attach plastic restraint that has already attached to unit to wall using wall screw & anchor (not provided).

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.