

## WOOD & CANE TRANSITIONAL NIGHTSTAND

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- thought we're confident you won't need it.

Before you begin:

Check for damage or missing parts. Call 1-855-MYTGTHOME (855-698-4846) to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly. Gather all tools prior to assembly.

*DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The required hardware parts are:

The bolts are labelled as (H1) x 8.

The 1" pan-head screws are labelled as (H2) x 1.

The 1 1/4" flat-head screws are labelled as (H3) x 16.

The 3/4" flat-head screws are labelled as (H4) x 8.

The 5/8" flat-head screws are labelled as (H5) x 8.

The cam bolt locks are labelled as (H6) x 16.

The cam locks are labelled as (H7) x 16.

The dowels are labelled as (H8) x 8.

The wedges are labelled as (H9) x 8.

The spring washers are labelled as (H10) x 8.

The allen key is labelled as (H11) x 1.

The parts for assembly are identified alphanumerically for ease.

The top panel is labelled as A.

The left panel is labelled as B.

The right panel is labelled as C.

The top rail is labelled as D.

The bottom assembly is labelled as E.

The back panel is labelled as F.

The leg is labelled as G.

The upper drawer front is labelled as H.

The lower drawer front is labelled as I.

The two drawer left are labelled as J.

The two drawer right are labelled as K.

The two drawer back are labelled as L.

The two drawer base are labelled as M.

### HOW TO USE CAM LOCK SYSTEM

The cam bolt is inserted and secured in the respective hole on the panel.

The cam lock is inserted and secured in the hole present on the panel to be attached. The panels are brought close to each other at right angles such that the cam bolt can be inserted into the cam lock of the respective panels.

With the help of a screwdriver, the cam lock is turned 180 degrees clockwise and tightened till the structure is perfectly secured.

Make sure the cam bolts have been screwed down flush and not left partially inserted.

**STEP 1:**

Insert cam lock bolts into pre-drilled holes in top, left and right panels, bottom assembly and upper panel then tighten.

Screw-in cam lock bolts must be screwed down flush.

**STEP 2:**

Insert cam locks into the holes in left and right panels, upper and lower back panels and front rails.

Make sure the arrow of the cam locks are pointing towards the end of the part.

**STEP 3:**

Attach upper back panel to lower back panel using cam locks.

**STEP 4:**

Attach left and right panels to unit and front rails using cam locks and dowels.

**STEP 5:**

Attach bottom assembly to unit using cam locks and dowels.

**STEP 6:**

Attach legs to unit using bolts and spring washers. Tighten bolts using allen key.

**STEP 7:**

Attach top panel to unit using 1" pan-head screw, cam locks and dowels.

**STEP 8:**

Attach plastic restraints to back of unit using 3/4" pan-head screws.

Attach plastic restraint that has already attached to unit to wall using wall screw and anchor (not provided).

Adjust the adjuster that has attached to the legs to stabilize your drawer.

**STEP 9:**

Attach drawer left, right and support to drawer back using 1/4" flat-head screws. Make sure heads of screws are flush with drawer sides.

Repeat for the remaining drawers.

**STEP 10:**

Insert drawer base into groove.

**STEP 11:**

Attach upper and lower drawer fronts to drawer left and right using 1 1/4" flat-head screws/ Make sure heads of screws are flush.

Make sure drawer base insert into drawer front groove and drawer back.

**STEP 12:**

Attach 1 1/4" flat-head screws to drawer support.

**STEP 13:**

Slide drawers into position.

**STEP 14:**

If the drawer is not aligned. Pull out the wrong drawer.

**STEP 15:**

Untighten slightly the screws.

Insert back the drawer into the main body.

**STEP 16:**

Adjust drawer's front panel left or rightside, upper or down, until the drawer's gap looks proportional.

Pull out the drawer slowly.

**STEP 17:**

Tighten the loose screw.

Make sure the front panel does not move and lock drawer's front panel position with 3/4 flat-head screws.

**STEP 18:**

Pull out drawers.

Make sure the front panel does not move and lock drawer's front panel position with 3/4 flat head screw.

**STEP 19:**

Slide drawers into position.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.