

PROJECT 62 ADA MIXED MATERIAL END TABLE WITH GLASS TOP

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts.

This will be easy. We did the hard work for you.

All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck – though we're confident you won't need it.

Before you begin

Check for damaged or missing parts.

Call 1-855-MYTGTHOME (855-698-4846) to order missing supplies.

Use the carton as a work surface to prevent product damage during assembly.

Gather all tools prior to assembly.

The tools needed are screwdriver and hex wrench. (Only hex wrench is included)

DISCLAIMER: *This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The red TARGET logo appears and fades from the screen.

The parts needed for the assembly are all labeled alphanumerically for ease.

The hardware parts needed for the assembly show up on the screen.

The ¼ inch 13 mm bolts are marked as (H1)X16.

The M4*30 mm screws are marked as (H2)X4.

The bumpers are marked as (H3)X4.

The hex wrench is marked as (H4)X1.

Spare hardware parts for bolts, screws and bumpers are provided along with the package.

The parts for assembly are identified alphabetically for ease.

Single top glass is labeled as A.

Two side frames are labeled as B.

Two top stretchers are labeled as C.

Two bottom stretchers are labeled as D.

Two drawer box supports are labeled as E.

Single drawer box is labeled as F.

STEP 1:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Align the two parts C sideways, with the corner slots for A facing inward. Now take a B on the right side of the unit and insert the two parts C into the extreme top corners of B. Now secure these top corners with two parts H1 and fasten it with an H4.

STEP 2:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Now take the two parts E and secure it to the middle rail of B, with the help of four parts H1. Both the parts E should be positioned below the two parts C. The H1 are fastened with the H4.

STEP 3:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Place the F between the parts C and the parts E, positioning the F's screw head facing the floor when the unit is turned upright.

Next, align and attach the parts D to the right side B, fasten it with two H1 and the H4. STEP 4:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Similarly, like STEP 1, attach the left side of B at the opposite end of the unit, using eight H1s and the H4.

STEP 5:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Make sure the F is perfectly pressed against the parts E, and the mounting holes overlap the pilot holes underneath the F without any obstruction. Now fasten the F to the two parts E carefully with four parts H2.

STEP 6:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Stand the unit upright and firmly insert flat up all the four H3, two along the breadth of the unit on each side of the parts C.

Next, carefully, place the A onto the H3 so that it sits perfectly on the flat surface of the H3. STEP 7:

NOTE: DO NOT fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

Position the unit at the desired location. If necessary, adjust the floor levelers to level the unit.

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Always use coasters under beverage glasses and flowerpots.

Liquid spills should be removed immediately.

Using a soft, clean cloth, blot the spill gently. Avoid rubbing.

Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.

Stains or marks from crayons or ink markers will be difficult to remove.

In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

Check bolts/screws and nuts periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

We hope you enjoy your purchase for many years. Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase.

Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Customer Service: 1-855-MYTGTHOME (855-698-4846)
8:30 a.m. - 4:30 p.m., PST, Monday to Friday

www.whalenfurniture.com

The maximum recommended weight allowance is 22.7 kg / 50 lb for glass top and open storage shelf. The maximum recommended weight allowance is 9.1 kg / 20 lb for drawer.

WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

NEVER allow children to climb or play with the TV or furnishing supporting the TV. NEVER place toys, food, remote, etc. on top of the TV or TV furnishing.
ALWAYS use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

NEVER place a TV on furniture that is not intended to support a TV.

NEVER exceed the maximum size and weight of the TV shown in the instructions. Be sure to refer to the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

NEVER exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible. Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

ALWAYS unload shelves and drawers, starting with the top surfaces, before moving.

NEVER push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it. The unit is not meant as a seat and no one should be sitting or standing on the pedestal.