WOOD WALL CABINET

Congratulations on your Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you.

All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck - thought we're confident you won't need it.

Before you begin

Check for damaged or missing parts. Call 1-855-MYTGTHOME (855-698-4846). Use the carton as working surface to prevent product damage during assembly. Gather all tools prior to assembly.

DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.

TOOLS NEEDED Phillip Head Screwdriver Powertool Pencil or marker

The hardware parts are labeled below

The JCB M6 x 25 are labeled as (H1) x 12.

The wood screws are labeled as (H2) x 3.

The wall anchors are labeled as (H3) x 3.

The adjustable pins are labeled as (H4) x 4.

The knobs are labeled as (H5) x 2.

The screws M4 x 20 are labeled as (H6) x 2.

The allen wrench is labeled as (H7) x 1.

The assembly parts are labeled alphabetically for ease

The top panel is labeled as A.

The left side panel is labeled as B.

The right side panel is labeled as C.

The fixed shelf is labeled as D.

The bottom panel is labeled as E.

The back panel is labeled as F.

The adjust shelf is labeled as G.

The left door is labeled as H.

The right door is labeled as I.

The back cleat (for hanging) is labeled as J.

STEP 1:

Start with side panel B fits, align the holes in fixed shelf (D) to side panel (B). Insert the 2xbolts (H1) tighten by using Allen wrench (H6).

Then start to assembly bottom shelf (E), align the holes in fixed shelf (D) to side panel (B). Insert the 2xbolts (H1) tighten by using Allen wrench (H7).

STEP 2:

Align the holes in side panel (C) to the holes in fixed shelf (D) and bottom panel (E). Insert 2xbolts (H1), tighten by using allen wrench (H7) and insert other 2xbolts (H1) into the bottom panel (E). Now tighten by using allen wrench (H6).

STEP 3:

Turn the unit up right, insert Back Panel (F) and assembly top panel (A) in place. Insert bolt (H1) with allen wrench (H7) both sides.

STEP 4:

Insert the adjustable pin in to the holes that you prefer, make sure the pin you inserted into both side are the same level. Put the shelf on the pin.

STEP 5:

Attach the knob to both side of door first, align the hole of knob to the door panel and insert wood screw H6 tighten by using screwdriver or power tool. Connect the door hinges together.

STEP 6:

Mark the drill hole at the wall first. Find an area you want your cabinet to be placed/installed, then turn the smaller surface area of Part J against the wall. You may use a pencil or marker to mark the drill hole by insert through the hole of part J and make a marking. Using powertool to drill the holes at the wall.

Once the wall was drilled, insert the wall anchor then align the hole of part J into the drilled hole at the wall. Insert wood screw (H2) and tighten with screwdiver or power tools.

STEP 7:

Hang the cabinet on the wall, onto the back cleat (J) which will hold it in position.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.