

## LORING SECRETARY DESK

Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your patio in no time.

Good luck -- though we're confident you won't need it.

Before you begin

Check for damaged or missing part. Call 1-855-698-4846 to order missing supplies.

Use the carton as a working surface to prevent product damage during assembly.

Gather all tools prior to assembly.

Two person life

Philips head screwdriver, flat head screwdriver, hammer needed for assembly. Do not use power tools.

*DISCLAIMER: This video incorporates the instructions provided by the manufacturer with this product. Target will not be liable for any damage or injury based on your reliance on the content provided.*

The required hardware parts are:

The cam locks are labeled as (H1) x 12.

The cam bolts are labeled as (H2) x 12.

The cam covers are labeled as (H3) x 12.

The M4 2x1-3/16" screws are labeled as (H4) x 4.

The M4 2x1-1/4" screws are labeled as (H5) x 6.

The 1/4"x23/32" bolts are labeled as (H6) x 16.

The M4 2x1/2" screws are labeled as (H7) x 36.

The M3 5x7/16" screws are labeled as (H8) x 14.

The M4x1/2" bolts are labeled as (H9) x 8.

The M4 2x1" screw is labeled as (H10) x 1.

The wall rope is labeled as (H11) x 1.

The wall anchor is labeled as (H12) x 1.

The USB charge station is labeled as (H13) x 1.

The left spring hinge labeled as (H14) x 1.

The right spring hinge is labeled as (H15) x 1.

The wrench is labeled as (H16) x 1.

The parts for assembly are identified alphanumerically for ease.

The top is labeled as A.

The left partition panel is labeled as B.

The right partition panel is labeled as C.

The upper fixed shelf is labeled as D.

The flip down door is labeled as E.

The lower fixed shelf is labeled as F.

The upper back panel is labeled as G.

The lower back panel is labeled as H.

The left side panel labeled as I.

The right side panel is labeled as J.

The upper front rail is labeled as K.

The upper back rail is labeled as L.

The lower rail is labeled as M.

## HOW TO USE CAM LOCK SYSTEM

Screw cam lock bolt into panel. Push cam lock into panel - arrow feature on cam lock top points to the end of frame. Align cam lock bolt(s) with cam lock(s) and insert all the way into cross-bored hole(s). Rotate cam lock(s) clockwise 180° to lock panels together. Panel should be tight against each other and connection should be rigid.

### STEP 1:

The cam bolts are inserted into the slots on I and J.

### STEP 2:

Cam bolts are inserted on A.

The M4 2x1-3/16" screws are used to secure B and C to D.

### STEP 3:

The cam locks are used to secure D and F to I, and covered with the cam covers.

### STEP 4:

The cam locks are used to secure J to the assembly, and covered with cam covers.

### STEP 5:

The cam locks and 1/4"x23/32" bolts are used to secure A to the top of the assembly, and the wrench is used to tighten the bolts.

### STEP 6:

Parts K, L and M are secure to the side panels with the 1/4"x23/32 bolts, and secured with the wrench.

### STEP 7:

The rails are secured to the other side panel and the lower fixed shelf with 1/4"x23/32" bolts, M4 2x1-1/4" screws and tightened with the wrench.

### STEP 8:

The upper back panel is attached to the unit with M4 2x1/2" screws and M3 5x7/16" screws. The USB charging station (H13) is secured in its place on the lower fixed shelf. The wall rope is attached to the back, in the middle of the top of the panel.

### STEP 9:

The lower back panel is secured in place with M4 2x1/2" screws.

## WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over: Install tipover restraint provided.

Place heaviest items in the lowest drawers.

Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.

Never allow children to climb or hang on drawers, doors or shelves.

Never open more than one drawer at a time.

(OR)

Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

#### STEP 10:

The flip down door is attached in place with M3 5x7/16" screws.

The left spring hinge is used to attach it to the wall of the left side panel with M4x1/2" bolts and M42x1/2" screws.

#### STEP 11:

The right spring hinge is attached to E and J with M42x1/2" screws and M4x1/2" bolts.

#### STEP 12:

Drill a 6.5mm diameter hole (1/4") in the wallboard. Tap the wall anchor (H12) into the hole until it is flush.

Secure the wall anchor through the wall rope with M4 2x1" screws.

Adjust the leveler at the feet for stability.

#### WEIGHT LIMITS

The unit has been designed to support the maximum loads shown.

Exceeding these load limits could cause sagging, instability, product collapse and/or serious injury.

#### WARNING

Please make sure that all objects are removed before moving the assembled unit. The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse and/or serious injury.

#### FCC INSTRUCTIONS

NOTE: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

--This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. this device must accept any interference received, including interference that may cause undesired operation.

--Instructions shall caution users that modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Your assembly is complete. Your unit is now ready for use.

The red TARGET logo appears and fades from the screen.